


ROGUE

# ASSEMBLY INSTRUCTIONS TRI-FLAME CANDLE

ITEM NO: 45.2139.00,45.2140.00,45.2141.00,  
45.2142.62,45.2143.62,45.2144.62

## PRODUCT

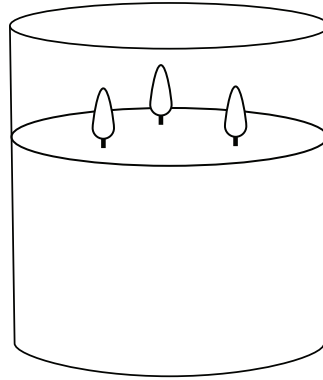

## IMPORTANT!

**Read the instructions before first use, only use the product as described in the instructions, keep this instruction for future reference. This product is not a toy, keep batteries away from children as can be considered small parts and may represent a choking hazard.**


- The LED cannot and must not be replaced.
- The outer layer of the LED candle is made of real wax, protect it from naked flames, heat sources and direct sun light, do not place real candles directly on or next to the LED candle, Do not try to ignite the wick.
- Avoid using the product in highly humid environments, keep away from water.
- Remove the batteries from the product if it will be put away or will not be used for a very long period.
- When replacing batteries, always replace the 3 batteries at the same time.

## INSERT BATTERIES

Open the batteries compartment located at the bottom of the LED candle (uses 3 x AA batteries), insert the batteries in the correct polarity, the battery orientation is embossed on compartment, after inserting the batteries, close the battery compartment.

## OPERATING THE LED CANDLE

The candle can be operated in two modes, "ON" for continuous light or "TIMER", on timer mode, the LED candle will remain ON for 6 hours continuously then will automatically turn OFF for 18 hours, this cycle will repeat until the switch is changed, simply select the mode of your preference.

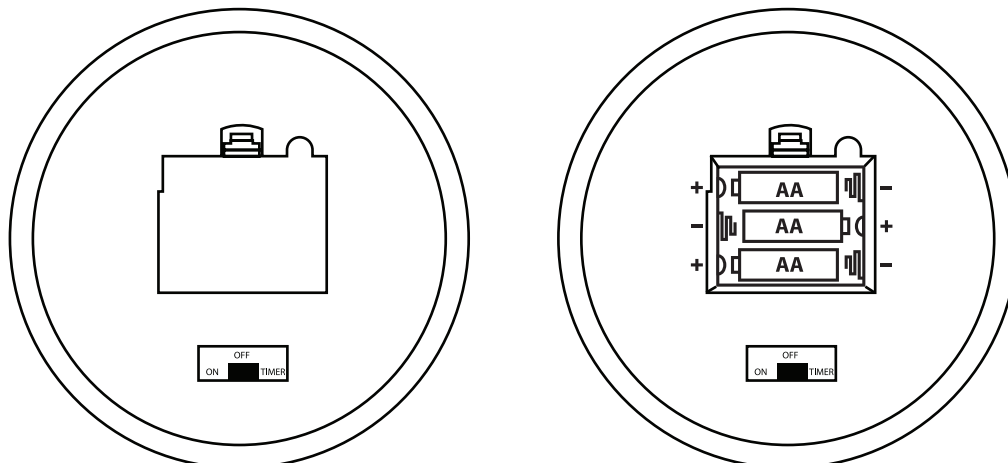

## DISPOSAL

Please follow your local council waste disposal advise.