



PARTS

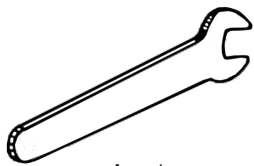


A x 1


STEP 1

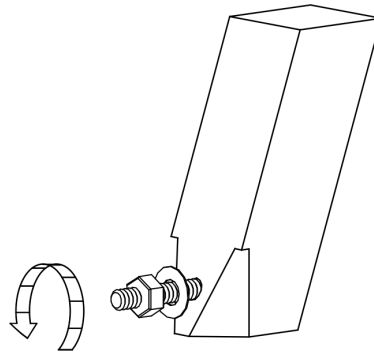

STEP 2

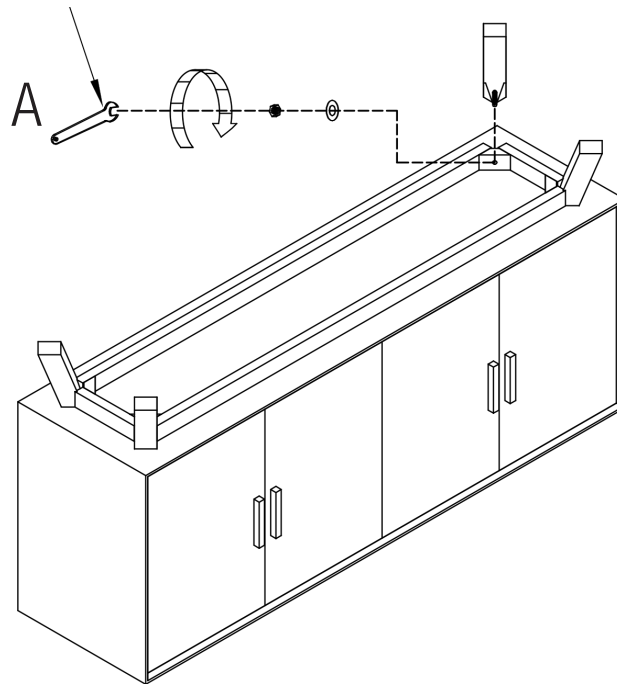

! WARNING

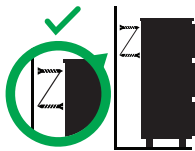

Children have died from furniture tipover.

- ALWAYS secure it with an anchor device
- NEVER allow children to stand, climb or hang on drawers, doors or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture



This furniture type is at high risk of toppling over.

Ask staff for more information or visit <https://www.productsafety.gov.au>

FINAL

