

PARTS



A x 24




B x 24




C x 1


STEP 1

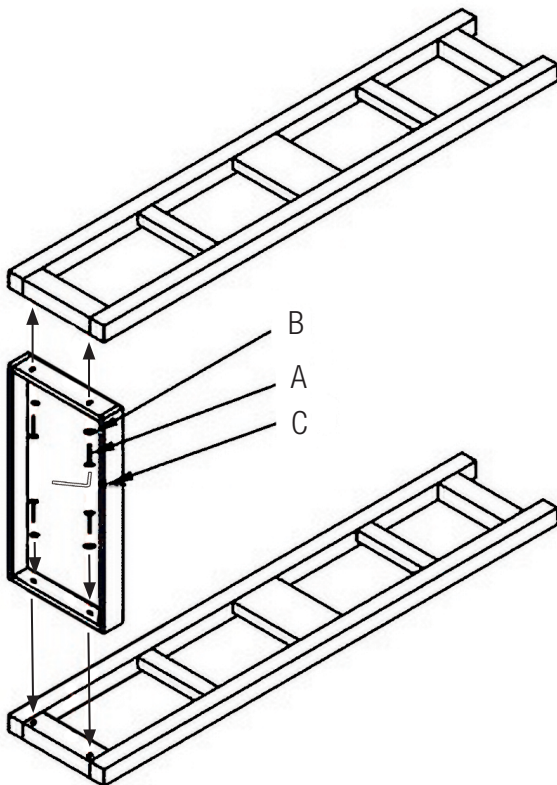


STEP 2

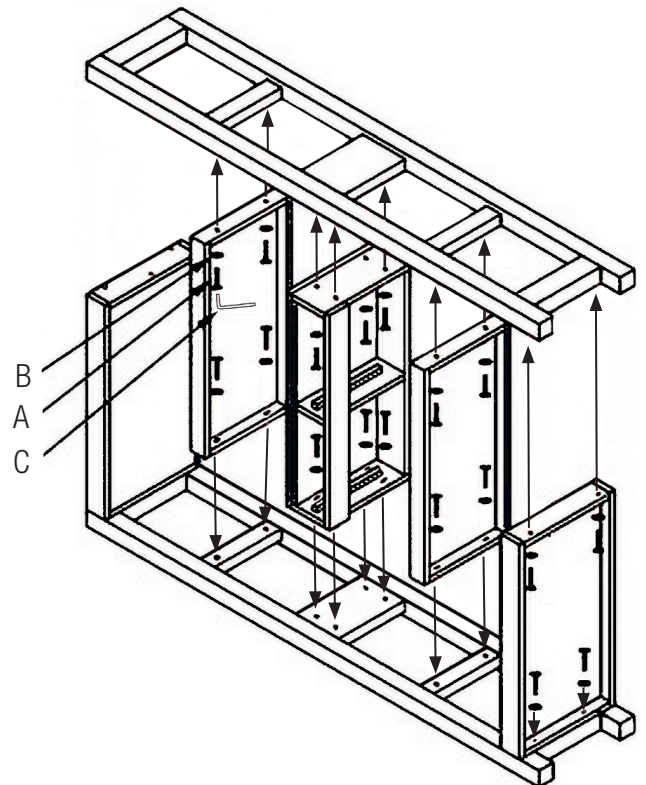

FINAL

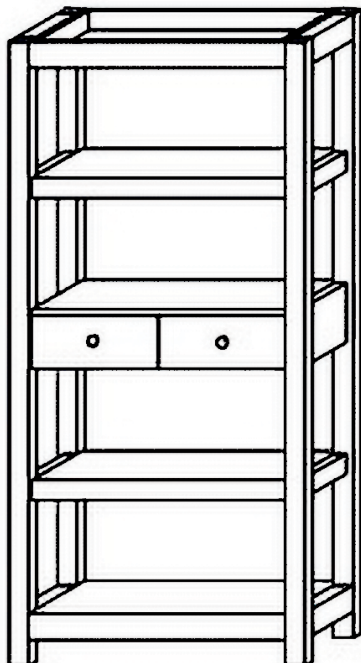

⚠ WARNING

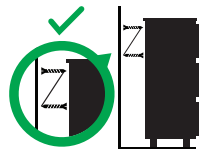

Children have died from furniture tipover.

- ALWAYS secure it with an anchor device
- NEVER allow children to stand, climb or hang on drawers, doors or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV
on this furniture



This furniture type is at
high risk of toppling over.

Ask staff for more information or visit
<https://www.productsafety.gov.au>