

DAVIS & WADDELL

essentials

Electric Knife Sharpener

D1517

Operating Instructions

Thank you for choosing the Davis & Waddell Essentials Electric Knife Sharpener. To ensure proper operation and to maintain the lifespan of your appliance, please read these instructions carefully before use.

Key Features

- Two stage grinding: coarse and fine
- Multifunctional: will sharpen knives, scissors and screwdrivers
- Non-slip feet to keep appliance in place during use
- Removable drawers for easy cleaning
- Overheat protection

Important Safety Instructions

- Do not immerse in water or any other liquid
- Do not use with lubricants, water or honing oil
- Ensure the knives and other items being sharpened are clean prior to sharpening
- After sharpening, knives will be extremely sharp. Take extra care when handling to avoid injury and store them safely in a knife block or cover with protective sheath.
- Only sharpen one blade at a time
- Do not apply too much downward pressure when sharpening knives as this may cause damage to appliance
- Unplug the appliance when not in use or when being cleaned
- Pull out from the power outlet by

- grasping the plug, never by the cord
- Always check the integrity of the cord before use, if the cord or plug is damaged do not use
- Always ensure the appliance control switch is in OFF position before plugging in
- Keep away from moving parts
- This appliance should be kept away from hot gas, heated ovens, electric burners or any hot surfaces
- The appliance should only be used on a hard, stable surface, such as table or benchtop
- This appliance is intended for household use, not commercial use.
- This appliance is intended to be used in household and similar applications such as: staff kitchen areas, farmhouses and bed and breakfast type environments.
- This appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- Children being supervised are not to play with the appliance
- The supply cord cannot be replaced. if the cord is damaged, the appliance should be scrapped.

Operation Instructions

Plug appliance in and turn the switch to "ON" position. The red light will illuminate.

Stage 1 - Coarse Grind

Put the knife into the right slot of the coarse grinding wheel at an approximately 16 degree angle (refer to diagram), ensure the blade is positioned with the handle or bolster as close to the grinding slots as possible.

As the knife touches the grinding wheel draw the knife toward you slowly, keeping a constant light downward

pressure on the knife, but do not twist. When sharpening a curved knife, lift the handle up as the knife tip approaches the end of the slot. Be sure to keep a constant pressure on the blade contour. Next repeat the same process on the left slot of the coarse grinding wheel.

Keep alternating between the right and left slots until you do 3 on each side, this will ensure the entire blade is sharpened and the blade edge proportions are maintained.

As a guide, each pull will take 2-3 seconds for short blades, 4-5 seconds for a 20cm blade, and 6 seconds for longer blades. The max operating time is 2 minutes.

Stage 2 - Fine Grind

Repeat the above steps, but this time with the right and left slots of the fine grinding wheel.


IMPORTANT: You should begin to pull the blade toward you as soon as you insert it and never push the blade away from you. Make sure that the pressure you apply on the handle is enough to keep the blade in good constant contact with the grinding wheel.

To sharpen scissors, simply guide the scissor blade slowly through the tools sharpening slot, keeping a constant pressure.

To sharpen flat head screwdrivers insert the tip of the screwdriver into the slot and grind for short periods, this will avoid over grinding.

For best results:

- Always clean and thoroughly dry knives before and after sharpening.
- Keep light downward pressure when sharpening.
- Maintain a constant pull rate over

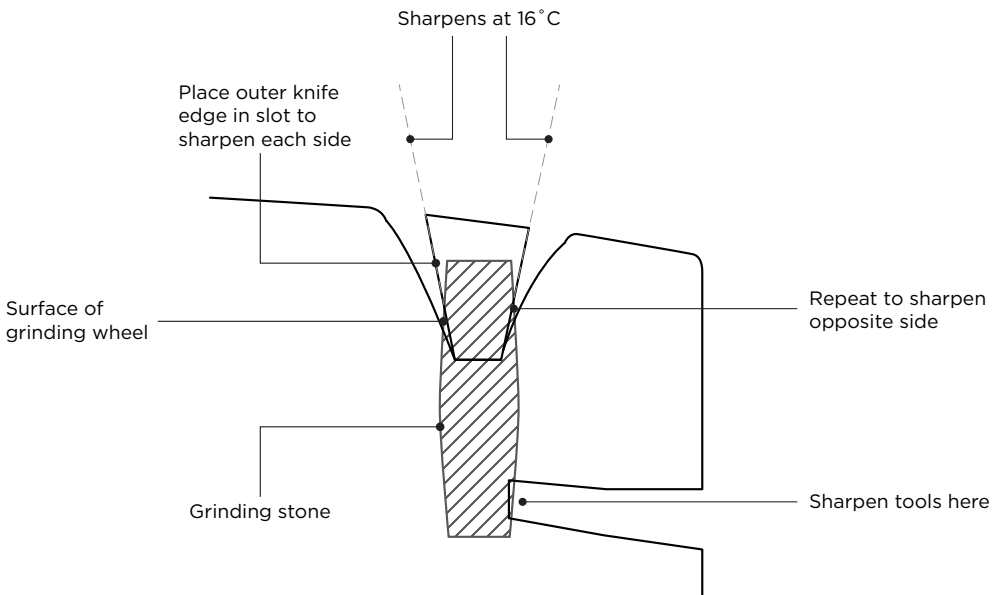

the length of the blade and do not interrupt or stop the motion when in contact with grinding wheels.

- Alternate pulls in right and left slots, except for specialised blades which only need to be sharpened on one side.
- To sharpen the blade near the tip of a curved blade, lift the handle up slightly as you approach the tip.

To ensure ideal sharpening result, please place the knife into slot at a 16 degree angle as shown in the diagram. Please use both slots for sharpening both sides of the knife.

Care

- Do not immerse in water and do not use any detergents. Simply wipe with a damp cloth or towel.
- Do not leave the appliance in a damp or steamy environment.
- This appliance is operated by an electric motor; there is no need to use lubrication for any moving parts, motor, bearings or sharpening surfaces.
- The appliance can collect metal dusts produced by sharpening. Remove the magnetised drawer from the base and wipe clean with a damp cloth after every use, replacing the drawer before storing.

Our 12-month Guarantee

- Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
- We stand by this product. Therefore, we offer a 12 month guarantee on the motor. The benefits of this guarantee

are in addition to any rights and remedies imposed by Australian Consumer Law. Our guarantee excludes normal wear and tear and instances where care and use instructions have not been followed.

- What IsAlbi will do: During this guarantee period IsAlbi will repair, replace, or refund any defective product. If identical product is not available for replacement, a similar product may be offered. IsAlbi asks you to cover the cost of postage/transit if the product needs to be sent back to us for inspection. If IsAlbi deems the product is defective, we will reimburse your postage/transit expenses. IsAlbi will be responsible for the postage/transit of the repaired/replacement product back to you.
- What to do: If a fault/defect is identified cease using the product immediately.
- To make a claim on this guarantee, take the product, proof of purchase and full details of the alleged defect to the retailer from whom the product was purchased. If you cannot access the retailer or are unsatisfied with the solution offered by the retailer, contact IsAlbi via the details below.

Contact

IsAlbi
Customer Care
87 Chifley Drive, Preston Vic 3072
P: 03 9474 1300
E: enquiries@isalbi.com.au