



D1519 Electric Digital Control Slow Cooker Operating Manual

Thank you for choosing the Davis & Waddell Essentials Slow Cooker. To ensure proper operation and to maintain the lifespan of your appliance, please read these instructions carefully before use.

1. Key Features

- Generous 4.5L removable ceramic bowl suitable for serving at the table.
- Digital controller for ease of use.
- 3 temperature settings, LOW, HIGH and WARM.
- Timer function.
- Glass lid to monitor cooking without losing heat.
- 12 month warranty.

2. Important Safety Instructions

When using electric appliances, especially when children are present basic safety precautions should always be followed, including the following:

- Read all the instructions before operating this appliance.
- Children should be supervised to ensure they do not play with the appliance.
- Do not immerse in water or any other liquid
- Unplug the appliance when not in use or being cleaned.
- Pull out from the power outlet by grasping the plug, never by the cord.
- Always check the integrity of the cord before use, if the cord or plug is damaged do not use.
- This appliance should be kept away from hot gas, heated oven, electric burner or any hot surface. Do not use the ceramic inner pot in an oven, microwave or directly on a stove top.
- The appliance should always be used on a hard stable surface, such as table or benchtop.
- Do not use the slow cooker if the ceramic pot is empty.
- Do not cook directly in the base unit, always use the ceramic pot.
- Do not use the ceramic pot or glass lid if cracked or chipped.
- Take care when cleaning the slow cooker.
- Unplug the unit when it is empty or not in use.
- This appliance is intended for household use, not commercial use.
- If the power or heat has been turned off for any extended period of time, the food inside the container may be unsafe to eat. It is recommended the food be discarded.
- Store these instructions for future reference.

3. Operation Instructions

- Clean the appliance thoroughly before use.
- Place the Slow Cooker on a stable surface, fully unwind the electrical cord and plug into the power point.
- Place the ceramic inner pot into the cavity of the Slow Cooker.
- Prepare recipe and place ingredients into the ceramic inner pot.
- Do not fill the ceramic inner pot past $\frac{3}{4}$ full. Some foods may expand during cooking and this may result in food spilling over.
- Place lid onto the ceramic inner pot.
- Always cook with the lid in place. Avoid removing the lid to check progress while cooking for the first 2 hours. This may result in heat loss and delay the cooking cycle.
- Select desired temperature setting; LOW or HIGH. Refer to the recipe for exact cooking time.
- The slow cooker has a built in timer (3 minute intervals).
- The WARM cook setting is only for keeping already cooked food warm.
- When the cooking cycle is complete, set the control knob to WARM.
- Turn to OFF position, unplug the cooker and allow all parts and accessories to cool before cleaning.

NOTE: Do not operate the WARM setting for more than 4 hours.

4. To Clean

- Switch off the slow cooker and allow to cool before cleaning
- The glass lid and ceramic inner pot are dishwasher safe. They can also be washed in hot, soapy water.
- DO NOT use abrasive cleaning tools or cloths, such as scoring pads. A soft cloth, sponge or rubber spatula can be used to remove any food residue.
- DO NOT allow sudden temperature changes for either the lid or inner ceramic pot – sudden changes in temperature may result in cracks or breakage of these parts.
- The exterior of the slow cooker can be cleaned with a soft, damp cloth. Wipe dry thoroughly. DO NOT use abrasive cleaners or scouring pads.
- Never immerse the base unit, electrical cord or plug in water.
- Allow to dry thoroughly before using.

5. Guarantee

If after following these instructions the slow cooker does not work, there may be a manufacturing problem. If this is the case, Albi guarantees this product for 1 year from the date of purchase. The full details of this guarantee can be found at www.albi.com.au or by calling (03) 9474 1300. In the event of such a problem you should return it to the place from which you bought it, WITH PROOF OF PURCHASE, in the form of a valid receipt. Damage through misuse will nullify this guarantee.

For any other advice please contact:

Customer Service

Albi

87 Chifley Drive,

Preston Vic 3072

Phone: 03 9474 1300

Email: albi@albi.com.au