

DAVIS & WADDELL


essentials

Rice Cooker

DES0487

www.davisandwaddell.com.au

Thank you for choosing the Davis & Waddell Rice Cooker. To ensure proper operation and to maintain the lifespan of your appliance, please read these instructions carefully before use.

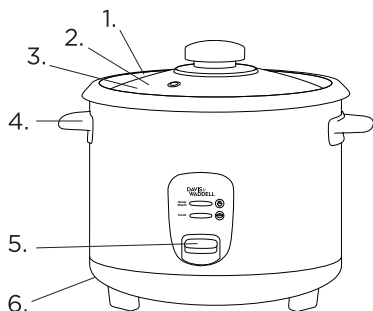

Features and Parts

1. Non-stick inner bowl inside
2. Steaming rack inside
3. Glass lid to see rice cooking
4. Carry handles on either side for convenience
5. Easy-to-use one push lever
6. Power cord & plug

Safety First

- Please read these instructions carefully before using appliance and save this manual for future use. This appliance is intended for household use only and not for commercial or industrial use.

Important Safeguards

- Please read through the following safety precautions carefully before switching on the appliance.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Keep this instruction manual in a safe place for future reference. Please keep the sales receipt and, if possible, the full box packaging.
- Failure to follow the instructions listed may result in electric shock, fire or serious personal injury.
- Before plugging appliance into the main electrical supply, check that the voltage and power supply comply with the specifications indicated on the rating plate of the appliance.
- Always place the appliance on a stable, flat, heat-resistant surface. Also, ensure that the surface can take the weight of the appliance during use.
- The appliance is intended for **DOMESTIC USE ONLY** and should not be used for commercial purposes.
- The appliance should only be used for its intended purpose.
- Always keep the appliance out of reach of children. Close adult supervision is necessary when appliance is used by or near children.
- Do not leave the appliance unattended when in use.
- This appliance is not intended to be operated by means of an external timer.
- Do not operate appliance if cord has been damaged.

- Be sure to unplug AC cord when pot is not inside the cooker, or when the cooker is not being used.
NOTE: Remember the keep warm feature operates whenever the AC cord is plugged in.
- The steam vent is very hot during cooking, so keep hands and face away from outer lid and steam vent

Packaging and Recycling

- The materials used for this product's packaging can be reused, recycled and disposed of through specific waste streams.
- **REUSE:** Keep packaging to safely store or transport your appliance, preventing damage.
- **RECYCLE:** Look for recycling symbols on packaging components to identify if they are recyclable. Check with your local authority to find out what materials are accepted for recycling in your area.
- **DISPOSE:** Look for symbols on packaging components and dispose of materials accordingly.

Operating your rice cooker

- Before first use, remove all promotional labels and any packaging materials. Wash the non-stick removable cooking bowl, steaming tray and glass lid in hot soapy water. Rinse and dry thoroughly.

How to cook rice

1. Use rice measuring cup provided to measure required quantity of rice (refer to rice cooking tables).
2. Place measured rice into a separate bowl and wash by rinsing with cold water, removing any excess starch. The rice is ready for cooking when water runs clear.
3. Ensure the exterior of the inner cooking bowl is clean before placing in the outer housing. This will ensure proper contact with the inner cooking surface.
4. Add washed rice to the inner cooking bowl, ensuring rice is spread evenly across the bottom of the bowl and not heaped to one side.
5. Add water using the following ratios:
White Rice:
1 measuring cup of rice = 1 cup of water on the rice marker level
Brown Rice:
1 measuring cup of rice = 1½ cup of water on the rice marker level (refer to rice cooking tables).
6. Place glass lid into position.
7. Plug power cord into outlet and switch the power on. The amber 'Warm' light will illuminate.
8. To commence cooking, flick lever down. The red 'Cook' light will illuminate.
9. When cooking is complete, the appliance will automatically switch to the 'Keep Warm' setting. The amber 'Warm' light will illuminate.
10. Open lid and turn rice over with serving spoon provided. Replace lid and allow rice to stand for 10-15 minutes before serving. This allows any excess moisture to be absorbed, resulting in a fluffier rice texture.

Rice cooking tables

We recommend following the water level within your cooker as a guide to measure cups of water.

White/Jasmine Rice			
Uncooked rice	Cold water level measurement	Cooked rice	Cooking time
2 cups	2	5 cups	18-20 minutes
4 cups	4	8 cups	22-24 minutes
6 cups	6	12 cups	26-28 minutes

Brown Rice/Quinoa			
Uncooked rice	Cold water level measurement	Cooked rice	Cooking time
2 cups	3	6 cups	50-52 minutes
4 cups	6	12 cups	52-54 minutes
6 cups	9	18 cups	56-58 minutes

Care & cleaning

- Before cleaning, unplug appliance and detach power cord. Allow all parts to cool before removing power cord and removable cooking bowl.
- Wash inner bowl, steaming tray and glass lid in hot, soapy water. Rinse and dry thoroughly.
- We do not recommend any parts of the appliance are washed in a dishwasher as harsh detergents and hot water temperatures may stain or distort the removable cooking bowl and accessories.

- Do not use abrasive cleaners, steel wool or metal scouring pads as these can damage the non-stick surface.
- To clean motor unit, wipe with damp cloth when unplugged. Never immerse in water.

Storage

- Ensure appliance is clean and completely dry before storing. When not using appliance for long periods, store in a well ventilated and dry place to prevent damage from dampness.

Our 12 month Guarantee

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

We stand by this product. Therefore, we offer a 12-month guarantee on the motor. The benefits of this guarantee are in addition to any rights and remedies imposed by Australian Consumer Law. Our guarantee excludes normal wear and tear and instances where care and use instructions have not been followed.

What IsAlbi will do

During this guarantee period, IsAlbi will repair, replace or refund any defective product. If identical product is not available for replacement, a similar product may be offered. IsAlbi asks you to cover the cost of postage/transit if the product needs to be sent back to us for inspection. If IsAlbi deems the product is defective, we will reimburse your postage/transit expenses. IsAlbi will be responsible for the postage/transit of the repaired/replacement product back to you.

What to do

If a fault/defect is identified, cease using the product immediately.

To make a claim on this guarantee, take the product, proof of purchase and full details of the alleged defect to the retailer from whom the product was purchased. If you cannot access the retailer or are unsatisfied with the solution offered by the retailer, contact IsAlbi via the details below.

IsAlbi

Sydney Office

sydsales@isalbi.com.au

1800 819 270

256/117 Old Pittwater Road,
Brookvale, NSW 2100

Melbourne Office

enquiries@isalbi.com.au

+61 (03) 9474 1300

87 Chifley Drive, Preston, VIC 3072