

# Leaf + Bean

## Electric Coffee and Spice Grinder

DLE0050


Instruction Manual

Thank you for choosing the Leaf & Bean Electric Coffee and Spice Grinder. To ensure proper operation and to maintain the lifespan of your appliance, please read these instructions carefully before use.


### Key Features

- Suitable for coffee beans, nuts or dried herbs and spices
- One-touch push operation for easy use
- Two stainless steel bowls
  - One grinding bowl (two blades)
  - One chopping bowl (four blades)
- Helmet lid with transparent centre for viewing grind

Leaf & Bean's Electric Coffee and Spice Grinder lets you grind and chop ingredients to a desired consistency. The two blade bowl is ideal for grinding coffee beans, whereas the four blade bowl will grind and chop larger ingredients, such as nuts or dried herbs and spices. Having separate bowls also helps prevent transfer of residual flavours between different foods. Use different bowls for different ingredients.

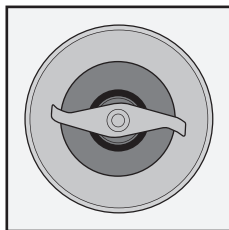

Grinding Bowl

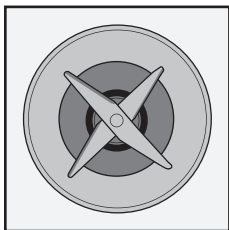

Chopping Bowl

### Safety First

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure they do not play with the appliance.

- Read all the instructions before operating appliance and retain for future use.
- This appliance is intended for indoor household use only.
- The supply cord should be regularly examined for signs of damage, and if the cord is damaged, the appliance must not be used.
- If the supply cord is damaged, it must be replaced by qualified persons in order to avoid a hazard.
- Pull out from power outlet by grasping the plug - do not pull the cord.
- Do not use an extension cord. Do not immerse appliance, plug or cord in water or any other liquid.
- Do not allow cord to touch hot surfaces.
- This appliance is not to be operated by means of an external timer or separate remote-control system.
- Unplug appliance when not in use or when being cleaned.
- Allow to cool before cleaning and storing.
- The appliance should always be used on a hard and stable surface, such as a table or benchtop.
- Do not use appliance for anything other than its intended use.
- Do not use a damaged appliance.
- Caution: To prevent damage to the appliance do not use alkaline cleaning agents when cleaning, use a soft cloth and a mild detergent.
- Do not use an empty grinder.

- The grinding bowl has a maximum capacity of 70g, and the chopping bowl has a maximum capacity of 45g at one time. Do not fill bowls beyond the MAX line marked inside the bowls.
- Do not use appliance without lid in place as contents may be ejected when grinder is used.
- Keep away from moving parts; always allow the blades to stop rotating before removing lid.
- Take care when cleaning grinder as blades are sharp.
- NOTE: Operation period shall not exceed 30 seconds each time. Operate up to three consecutive cycles. After operating three cycles, to avoid the appliance overheating let the main body rest to room temperature before using again.
- Place the helmet lid securely in place on the bowl.
- NOTE: A safety feature of this appliance prevents it from operating unless the lid is in place

## Packaging and Recycling

The materials used for this product's packaging can be reused, recycled and disposed of through specific waste streams.

- REUSE: Keep packaging to safely store or transport your appliance, preventing damage.
- RECYCLE: Look for recycling symbols on packaging components to identify if they are recyclable. Check with your local authority to find out what materials are accepted for recycling in your area.
- DISPOSE: Look for symbols on packaging components and dispose of materials accordingly.
- Lightly press lid down to start grinding.
- Once ingredients have reached desired consistency of grinding or chopping, release pressure on lid. Grinding should usually take around 30 seconds.
- Allow blades to stop spinning before removing lid to check consistency of the grind.
- If further grinding/chopping is required, replace lid and repeat steps above.
- Remove the bowls by twisting anticlockwise.
- Remove the plug from the outlet.
- Never store food in grinder.

## Operating Your Coffee Grinder

Before first use

- Wash the lid and both bowls, taking care around sharp blades.
- Place the appliance on a flat stable surface.
- Place either the chopping or grinding bowl into the appliance body.
- Twist the bowl clockwise to lock securely in place.
- The grinding bowl can grind coffee beans (maximum capacity of 70g).
- The chopping bowl can chop dried herbs/spices, nuts, onions, and dried bread (maximum bowl fill 2/3, with a maximum weight capacity of 45g).
- Place the food into chosen bowl.
- Measure desired quantity of ingredient and pour into bowl. If grinding hard herbs and spices we recommend not filling to maximum level. Grind these in smaller batches to prevent overloading grinder.
- Switch off grinder and unplug from the power supply.
- Clean the container and lid after each use. Lid: hand wash. Stainless steel bowls: dishwasher safe. Dry lid and bowl thoroughly.
- Stainless steel bowls are dishwasher safe. Take care not to touch the blades with your hands.
- Wipe the outside of the appliance with a damp cloth.
- Do not use abrasive cleaning agents as these may scratch the surface.
- Never immerse base unit, electrical cord or plug in water.
- Store the cord by winding into the cord storage compartment in the base.

## Care and Storage

## **IsAlbi Guarantee**

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The benefits of this warranty are in addition to any rights and remedies imposed by Australian State and Federal legislation that cannot be excluded. Nothing in this warranty excludes, restricts or modifies any State or Federal legislation applicable to the supply of goods which cannot be so excluded, restricted or modified.

## **Guarantee**

We warrant that, subject to the exclusions and limitations below, the Product will be free from defects in materials and workmanship under normal domestic household use. The 12-month warranty period commences on the date of sale by the original retailer to the original purchaser. The warranty applies only while the Product is owned by the original purchaser.

Use of the Product in a commercial capacity will void this warranty. If a defect appears in the Product before the end of the warranty period and we find the Product to be defective in materials or workmanship, we will, in our sole discretion either:

- (a) repair the Product using identical or similar components; or
- (b) replace the Product with a product comparable in quality and value.

We reserve the right to change or discontinue our product ranges at any time without notice and without liability.

## **Exclusions**

This warranty does not apply if proper care and/or usage instructions are not followed. This warranty does not cover scratches, stains, discoloration or damage caused by misuse.

## **How to Claim**

Any claims for warranty should be made with proof of purchase and full details of the alleged defect, to the retailer from whom the Product was purchased. If the retailer has closed its business, please contact us at the details below. You must make the Product available to us or our authorised repair agent for inspection. The cost of delivery of the Product to and from us for the purpose of assessment is your responsibility.

## **Limitations**

We make no express warranties or representations other than as set out in this Guarantee. The replacement of the product or the refund of the purchase price is the absolute limit of our liability under this Guarantee.

## **Contact**

IsAlbi

87 Chifley Drive, Preston Vic 3072

P: +61 (03) 9474 1300

E: [enquiries@isalbi.com.au](mailto:enquiries@isalbi.com.au)

[www.isalbi.com.au](http://www.isalbi.com.au)