 



PARTS



A x 72




B x 2

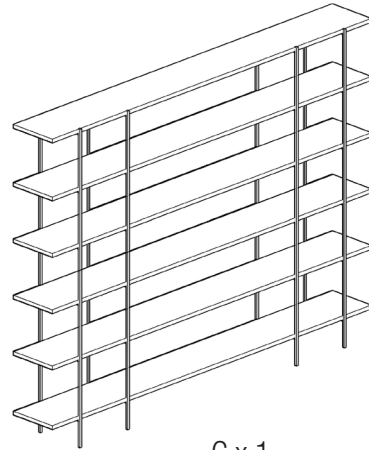


C x 1


STEP 1

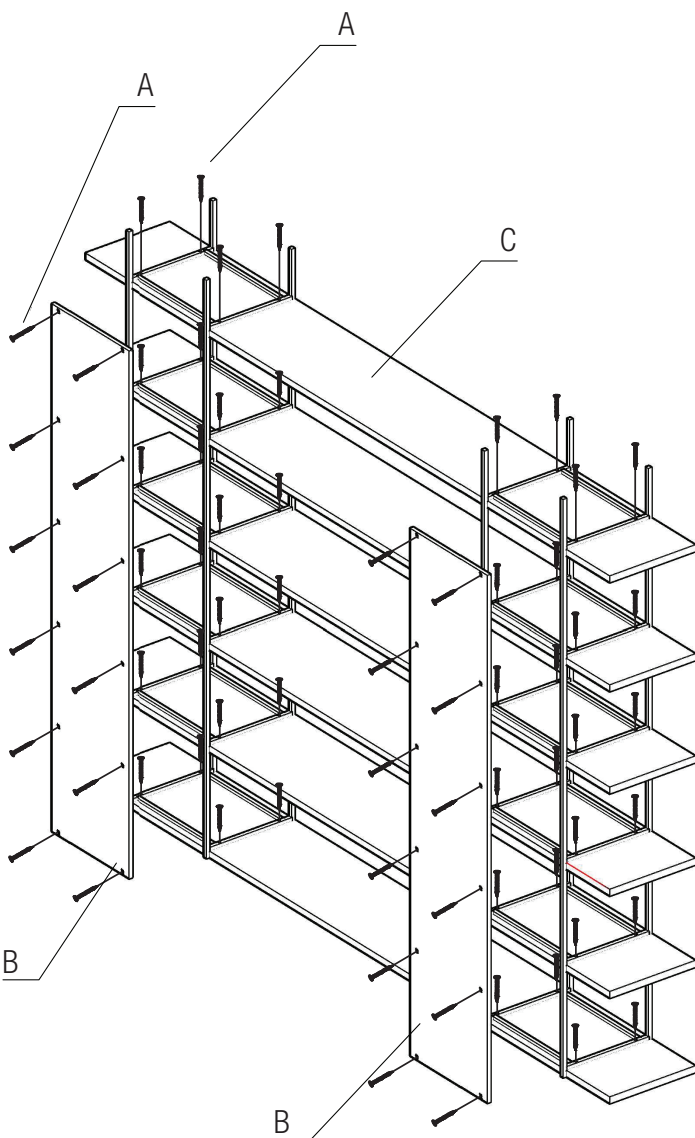

FINAL

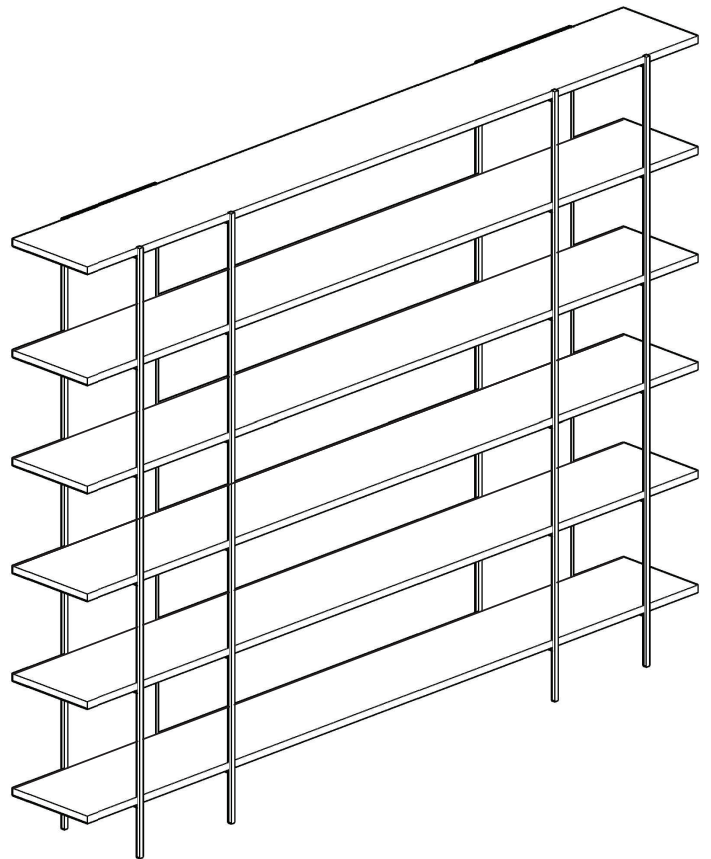

WARNING

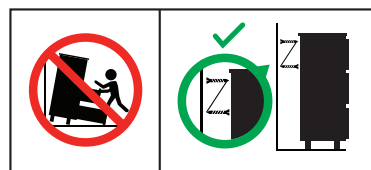

**NEVER put a TV
on this furniture**

This furniture type is at
high risk of toppling over.

Children have died from furniture tipover.

- ALWAYS secure it with an anchor device
- NEVER allow children to stand, climb or hang on drawers, doors or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

Ask staff for more information or visit <https://www.productsafety.gov.au>