



## Electric One Touch Grinder F5100237

### Instruction Manual

Thank you for choosing the Leaf & Bean Electric One Touch Grinder. To ensure proper operation and to maintain the lifespan of your appliance, please read these instructions carefully before use.

### Features

- One touch button operation for easy use
- Grinds up to 60 grams of coffee beans in approximately 30 seconds
- Transparent lid allows you to easily check the grind level as you go
- Stainless steel wing-blades also grind herbs and spices

### Safety First

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.

- Read all the instructions before operating appliance and retain for future use.
- This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments
- This appliance is intended for indoor household use only.
- The supply cord should be regularly examined for signs of damage, and if the cord is damaged, the appliance must not be used.
- If the supply cord is damaged, it must be replaced by qualified persons in order to avoid a hazard.
- Pull out from power outlet by grasping the plug – do not pull the cord.
- Do not use an extension cord. Do not immerse appliance, plug or cord in water or any other liquid.
- Do not allow cord to touch hot surfaces.
- This appliance is not to be operated by means of an external timer or separate remote-control system.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move during operation.
- Allow to cool before cleaning and storing.
- The appliance should always be used on a hard and stable surface, such as a table or benchtop.
- This product is only for grinding coffee beans or dry solid herbs and spices. Do not use this appliance for anything other than its intended use.
- This appliance is not intended for liquids. Do not pour hot liquid into the processor as it can be ejected due to sudden steaming.
- **CAUTION:** To prevent damage to the appliance do not use alkaline cleaning agents when cleaning, use a soft cloth and a mild detergent.
- Do not use an empty grinder.
- The grinder has a maximum capacity of 60g at one time. Do not overfill the grinder.
- Do not use grinder without lid in place as contents may be ejected when grinder is used.
- Keep away from moving parts; always allow the blades to stop rotating before removing lid.
- Take care when cleaning grinder as blades are sharp.

## Packaging and Recycling

The materials used for this product's packaging can be reused, recycled and disposed of through specific waste streams.

- **REUSE:** Keep packaging to safely store or transport your appliance, preventing damage.
- **RECYCLE:** Look for recycling symbols on packaging components to identify if they are recyclable. Check with your local authority to find out what materials are accepted for recycling in your area.
- **DISPOSE:** Look for symbols on packaging components and dispose of materials accordingly.

## Operating your Coffee Grinder

- Clean the appliance before use. (See Care and Storage)
- Place the coffee grinder on a stable surface, fully unwind the electrical cord and plug into the power point.
- Remove the lid (twist anti-clockwise) and measure the desired quantity (maximum 60g) of coffee beans into the lid of the grinder. The lid when full is 60g. If grinding hard herbs or spices we recommend not filling to maximum level, grind these in smaller batches to prevent overloading the grinder.
- Tip the beans into the base unit of the grinder and refit the lid.
- Press lightly down on the lid and twist clockwise to lock the lid into position.
- Press and hold down the button to start grinding the coffee beans.
- When the coffee beans have reached the desired grind (usually after approximately 30 seconds) release the pressure on the button.
- Allow the blades to stop spinning before removing the lid to check the consistency of the grind.

- If further grinding is required, replace the lid and repeat the steps above. If the grinder does not operate after replacing the lid, check that the rim is free of coffee grounds.
- Remove the ground coffee and use in your favourite drink. Never store ground coffee in the grinder.
- Clean and allow the base unit to cool before storing.

**NOTE:** Do not operate for more than 60 seconds. If desired grind is not achieved after 60 seconds of continuous use allow the grinder to cool for 60 seconds before restarting.

## Care and Storage

- Switch off the grinder and unplug.
- Remove the lid and wash in warm water. Rinse and wipe dry, ensure no water is caught inside the lid. If water enters the lid simply shake the lid to remove. The grinder is not dishwasher safe.
- Taking care not to touch the blades with your hands, remove any residual coffee grounds from the base unit and lid rims using a brush.
- Allow to dry thoroughly before storing.
- Wipe the outside of the appliance with a damp cloth.
- Do not use abrasive cleaning agents as these may scratch the surface.
- Never immerse base unit, electrical cord or plug in water.
- Store the cord by winding into the cord storage compartment in the base.

## **Our Guarantee**

In Australia, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

IsAlbi offers a 12 month guarantee on the motor (this excludes normal wear and tear or if care and use instructions have not been followed).

During this period IsAlbi will repair, replace or refund a defective product. IsAlbi asks you to cover the cost of postage if the product needs to be sent back to us for inspection. If IsAlbi deems the product is defective, we will reimburse your postage expense. IsAlbi will be responsible for postage of the repaired/replacement product back to you.

If a fault/defect is identified cease using the product immediately. To claim on this guarantee, take the product, proof of purchase and full details of the alleged defect to the retailer from whom the product was purchased. If you cannot access the retailer or are unsatisfied with their solution, contact IsAlbi:

### **IsAlbi**

87 Chifley Drive, Preston, Victoria 3072

P: +61 (03) 9474 1300

E: [enquiries@isalbi.com.au](mailto:enquiries@isalbi.com.au)

[isalbi.com.au](http://isalbi.com.au)