



Potato Ricer

G0000029

Thank you for choosing the SVNA Potato Ricer. To ensure proper operation and to maintain the lifespan of your device, please read these instructions carefully before use.

PRODUCT OVERVIEW



Clever arm with grooves rests on multiple bowl sizes

Press Plate



Removable centre console

Console Chamber

OPERATING INSTRUCTIONS

1. Before use, remove all packaging from the product. Extract the center console from the console chamber and wash and dry all parts thoroughly.
2. Select the disc best suited for your desired texture and place it inside the center console, then placing it back into the center console chamber.



COARSE - Ideal for heavy textured ingredients, chunky rustic mashed potatoes or removing moisture from blanched vegetables.



FINE - Ideal for the creamiest mashed potatoes, gnocchi bases, purée or baby food.

3. Position the potato ricer over a bowl or pot and secure the grooved arm so it rests securely on the rim.
4. Add your chosen food to the center chamber and lower the handle so the press plate rests on the contents.
5. Apply even pressure and push the contents through the disc.

CARE INSTRUCTIONS

For best results, use cooked or soft vegetables and fruit. Do not overfill the console. Top rack dishwasher safe. Disassemble before washing.

CONTACT

IsAlbi
87 Chifley Drive, Preston,
Victoria 3072
P: +61 (03) 9474 1300
E: enquiries@isalbi.com.au