



Potato Chipper

G0000043

Thank you for choosing the SVNA Potato Chipper. To ensure proper operation and to maintain the lifespan of your device, please read these instructions carefully before use.


PRODUCT OVERVIEW

Includes

- Chipper
- Thick cut blade with ejector
- Thin cut blade with ejector

OPERATING INSTRUCTIONS

1. Lift arm to upright position. This will allow ejector to slide back. You can change the ejector size at this step.
2. Fit desired ejector in place and lock in securely (see below). Ensure you are using the correct-sized ejector for your chosen blade size. Using incorrect ejector and blade combination will damage blade.

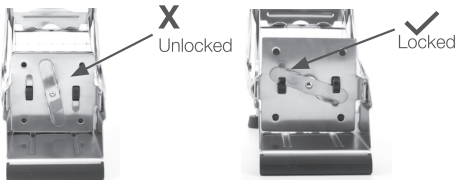

3. Lift **PART A** (see below) to release cutting blade. Carefully slide desired blade in position and make sure **PART A** is pushed back in place to secure blade. **If you do not secure blade, it may shift and damage ejector.**



4. Place potato between blade and ejector and push arm down to chop.

TIPS

Great for also chopping cucumber, zucchini, apples and other medium density fruits and vegetables.

Not suitable for use on dense vegetables such as sweet potato, beetroot and carrots.

CARE INSTRUCTIONS

Carefully disassemble and hand wash in warm, soapy water. Use extreme caution when handling sharp blades.

CONTACT

IsAlbi
87 Chifley Drive, Preston, Victoria 3072
P: +61 (03) 9474 1300
E: enquiries@isalbi.com.au