

# CLIMATE CLOCK

Digital Clock & Weather Station

## USER MANUAL

### FEATURES

- Time: 12/24H format
- Calendar: 2000/1/1 - 2099/12/31
- Weekday display
- Alarm and snooze: 5 minutes snooze time
- Indoor temperature range: 0°C- 50°C (32°F - 122°F)
- Indoor humidity range: 20% - 95%
- Comfort level indicator
- White backlight turns on for 10 seconds when in use
- Hole for hanging
- Foldable stand
- Power consumption: 2 x AAA batteries (not included)

### OPERATION

- 1) To enter time mode; press MODE key until "TIME" is displayed on the upper left corner
- 2) Under time mode, press MODE key once to view calendar
- 3) Under time mode, press MODE key twice to view alarm time
- 4) Under time mode, press or hold the UP key to switch time format to 12/24H
- 5) Under time mode, press or hold the DOWN key to switch temperature display to °C or °F

### TIME SETTING

- 1) Under time mode, hold the MODE key for 3 seconds to enter time setting mode  
The setting sequence is Hour -> Minute -> Exit. To move from one to the next, press MODE
- 2) Press the UP key once to adjust the time forward - press the DOWN key once to adjust the time back. Hold the UP or DOWN key for 2 seconds to adjust faster  
The setting will be confirmed and exited without any actions after 30 seconds

### 12/24H HOUR FORMAT

Under time mode, press or hold UP key to switch the time display between 12H and 24H format

### CALENDAR SETTING

- 1) Under time mode, press the MODE key once to view the calendar  
Hold the MODE key for 3 seconds to enter the calendar setting  
The setting sequence is Year -> Month -> Date -> Exit  
To move from one to the next, press MODE
- 2) Press the UP key once to adjust the date forward - press the DOWN key once to adjust the date back. Hold the UP or DOWN key for 2 seconds to adjust faster  
The setting will be confirmed and exited without any actions after 30 seconds


### ALARM AND SNOOZE SETTING

- 1) Under time mode, press the MODE key twice to view alarm time, then hold the MODE key for 3 seconds to enter alarm setting mode  
The setting sequence is Alarm hour -> Alarm minute -> Exit  
To move from one to the next, press MODE
- 2) Press the UP key once to adjust the time forward - press the DOWN key once to adjust the time back. Hold the UP or DOWN key for 2 seconds to adjust faster  
The setting will be confirmed and exited without any actions after 30 seconds

When the alarm goes off, the alarm icon  will flash. The alarm sound will change as below:

- 0-10 seconds: 1 BI sound/sec
- 11-20 seconds: 2 BI sound/sec
- 21-30 seconds: 4 BI sound/sec
- After 30 seconds: continue BI sound

The sound will automatically stop after 1 minute. The alarm will repeat at the set time each day, unless turned off or reset

When the alarm is on, press the MODE key to activate the snooze function for 5 minutes. The snooze icon  will flash  
Press any key to stop the snooze function




### ALARM ON/OFF

Under alarm time mode, press or hold the UP or DOWN key to turn on/off alarm function

### TEMPERATURE DISPLAY FORMAT

Under time mode, press or hold DOWN key to switch temperature display in °C or °F

### COMFORT LEVEL

 WET	 COMFORT	 DRY	NO FACE SYMBOL DISPLAYED
Any temperature Humidity > 70%	20°C < Temp < 26°C 40% < Humidity < 70%	Any temperature Humidity < 40%	Temp < 20°C or Temp > 26°C 40% < Humidity < 70%

**Battery Information:** 2 x AAA replaceable batteries (not included)  
Remove the screw and cover, insert batteries with the correct polarity, replace the cover and screw securely. Non-rechargeable batteries are not to be recharged. Rechargeable batteries are only to be charged under adult supervision. Rechargeable batteries are to be removed from the product before being charged. Different types of batteries or new and used batteries are not to be mixed. Batteries are to be inserted with the correct polarity. Exhausted batteries are to be removed from the product. The supply terminals are not to be short-circuited. Packaging has to be kept as it contains important information.  
If storing for long periods of time, we recommend you remove the batteries  
NOTE: When replacing batteries, please separate old batteries from normal waste and dispose of correctly. Please handle batteries with caution.



isa bi.com.au