

Galaxy Star PROJECTOR

INSTRUCTION MANUAL

FEATURES

Projects changing coloured stars onto the wall or roof.

Choose from 6 sounds of nature: ocean surf, birds singing by a creek, falling rain, birds at dawn, babbling brook and summer night or choose the heartbeat sound to soothe babies and help them fall asleep. Simply select your favourite environment and relax!

The Star Projector and Sound Machine can be used separately or together.

This is not a toy.

After half an hour, the Galaxy Star Projector goes into power-saving mode and the music will automatically switch off (the lights stay on). It also incorporates a volume function and can be used as a speaker for your computer, MP3 or smart phone for up to 5 hours playing time (3.5mm cable included).

COMPUTER / MP3 SPEAKER

Press the SOUND ON/OFF button to power the sound function. To use as an external speaker attach a 3.5mm audio plug to the LINE IN jack and the outside device.

It can be used as a loudspeaker for a Computer, MP3 Player and Smart phone.

SOUND FUNCTION

To activate or stop the sound function, simply press down on the SOUND ON/OFF button. To select a sound press on the Select button until you come to the sound you want to hear. The VOLUME button has three levels low, medium and high.

STAR PROJECTOR

Press the LIGHT button to turn on or off the star projector.

BATTERY INFORMATION

Requires 3 x AA replaceable batteries
(not included)

TO REPLACE THE BATTERIES

Remove the screw and cover, insert batteries with the correct polarity, replace the cover and screw securely. Non-rechargeable batteries are not to be recharged. Rechargeable batteries are only to be charged under adult supervision. Rechargeable batteries are to be removed from the product before being charged. Different types of batteries or new and used batteries are not to be mixed. Batteries are to be inserted with the correct polarity. Exhausted batteries are to be removed from the product. The supply terminals are not to be short-circuited. Packaging has to be kept as it contains important information.

PLEASE NOTE:

Requires 3 x AA batteries (not included). If storing for long periods of time, we recommend you remove the batteries. When replacing batteries, please separate old batteries from normal waste and dispose of correctly. Please handle batteries with caution.

IS GIFT
PO Box 7120 Warringah Mall
NSW 2100 Australia
www.isalbi.com.au

Packaging designed
in Australia.
© IS GIFT 2022.
All rights reserved.

