

# Potato Chipper

 
 
## Instructions for Use

### Includes

- Chipper
- Thick cut blade with ejector
- Thin cut blade with ejector



### Preparing chips

1. Lift arm to upright position. This will allow black ejector to slide back and allow you to change ejector size.
2. Fit desired ejector in place and lock in securely (see below).

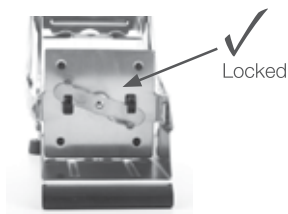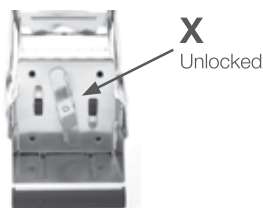

Ensure you are using the correct-sized ejector for your chosen blade size. Using incorrect ejector and blade combination will damage blade.

  3. Lift **PART A** (see below) to release cutting blade. Carefully slide desired blade in position and make sure **PART A** is pushed back in place to secure blade. **If you do not secure blade, it may shift and damage ejector.**

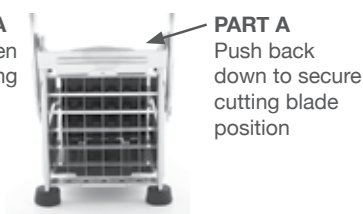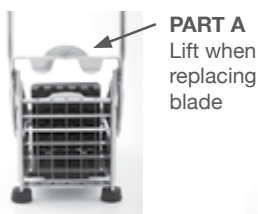

4. Place potato between blade and ejector and push arm down to chop.



### Care

Carefully disassemble and hand wash in warm, soapy water using extreme caution when handling sharp blades.

### Contact

IsAlbi  
87 Chifley Drive, Preston, Victoria 3072  
P: +61 (03) 9474 1300  
E: [enquiries@isalbi.com.au](mailto:enquiries@isalbi.com.au)